



**REPLACING THE CARTRIDGE** (Model: FP3000)

The most important part of maintaining your Drinking Water System is replacing the Cartridge on a regular service interval. To insure that your System continues to perform as represented in the Performance Data Section of this manual, the Cartridge should be replaced every twelve months, when you notice a reduction in flow, when the rated capacity of the cartridge has been reached, or whenever there is a taste or odor reoccurrence, whichever occurs first.

Be sure to insist on Genuine, Royal Prestige NSF Listed Replacement Cartridges. Genuine replacement cartridges for this System can be identified by the Royal Prestige Registered Trademark which appears on every Genuine, Royal Prestige NSF Listed Replacement Cartridge. Only Genuine Royal Prestige Replacement Cartridges have been tested and certified to insure the performance represented in the Performance Data Section of this manual. Failure to use Genuine, Royal Prestige Replacement Cartridges and replacement components will invalidate your warranty.

The replacement cartridge for this System (Type: RC-30-FP) has a rated capacity of 480 gallons or approximately one year of use.

If you detect a reduction in flow rate, or any taste or odor re-occurrence prior to end of twelve months, this is an indication that you will need to change the cartridge more frequently due to the water quality in your area.

You may order replacement cartridges online at [www.RoyalPrestige.com](http://www.RoyalPrestige.com) or through your independent representative.

1. Remove the Lid Assembly by turning counterclockwise until it separates from the Filter Housing. As you remove the Lid Assembly, the Cartridge will remain attached to the Lid Assembly.

**RECOMMENDATION:** Rubber gloves should be worn to avoid direct contact with the contaminants removed by the used Cartridge.

2. Hold the Lid Assembly and rotate the Cartridge counterclockwise to remove. Discard the old cartridge with your regular refuse.
3. Wash the inside of the Filter Housing and Lid Assembly with warm water, a mild dishwashing detergent using a clean cloth.

**CAUTION:** Do not use abrasive pads or other abrasive materials to clean the Filter Housing and the Lid Assembly.

4. Remove the plastic sanitary wrap from the new Cartridge. Thread the new Cartridge clockwise onto the threaded post on Lid Assembly until you feel resistance. Make an additional quarter turn. Do not over-tighten.
5. Thread Lid Assembly firmly onto Filter Housing.
6. Turn "cold" water "on" and pull Diverter Pin. Carefully look for leaks around the fitting, clamp and threaded areas. In the event of a leak, dis-assemble the connection where leak is present, re-assemble and tighten.
7. Position the Spout so that water will flow into sink. Turn on the cold water faucet and pull the Diverter Pin. Water will begin filling the Filter Housing.
8. Allow System to flush into sink for fifteen (15) minutes. This procedure will remove any fine, black carbon particles left over from the manufacturing process, expel trapped air and will condition the Cartridge for normal use. This procedure should be repeated each time a new Cartridge is installed.

**IMPORTANT:** Before using this System, or whenever a new Cartridge is installed, be sure to allow the System to flush for fifteen (15) minutes. This procedure will remove fine, black carbon particles left over from the manufacturing process, expel trapped air, and will condition the Cartridge for normal use.

Congratulations! Your new Drinking Water System is now ready for use.



**REPLACEMENT CARTRIDGE INSTRUCTIONS**  
**FRESCAPURE™ 5000, FRESCAPURE™ 4500,**  
**FRESCAPURE™ 4000 and FRESCAPURE™ 3000**

Drinking Water System:	Model Number	Cartridge Type:	Rated Capacity:
FrescaPure™ 5000	FP5000	Model RC-50-FP	800 gallons
FrescaPure™ 4500	FP4500	Model RC-50-FP	800 gallons
FrescaPure™ 4000	FP4000	Model RC-40-FP	800 gallons
FrescaPure™ 3000	FP3000	Model RC-30-FP	480 gallons



Model: FP5000  
with Filter Life Indicator



Model: FP4500  
with Filter Life Indicator



Model: FP4000



Model: FP3000

**Hy Cite Corporation**  
2115 Pinehurst Drive  
Middleton, WI 53562-2538

Questions or Comments:  
1-800-279-3373  
8am-5pm Central Standard Time

The following statements and certifications apply specifically to the FrescaPure™ 5000, FrescaPure™ 4500 & FrescaPure™ 4000 Systems:



System tested and certified by NSF International against NSF/ANSI Standard 42 for the reduction of Chlorine Taste and Odor, nominal particulate Class I and NSF/ANSI Standard 53 for the reduction of Lead, Cysts, VOC, Turbidity and MTBE.

See performance data sheet for individual contaminants and reduction performance.

The following statements and certifications apply specifically to the FrescaPure™ 3000 System.



System tested and certified by NSF International against NSF/ANSI Standard 42 for the reduction of Chlorine Taste and Odor, nominal particulate Class I and NSF/ANSI Standard 53 for the reduction of Lead and MTBE.

**IMPORTANT USE GUIDELINES**

1. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the System. Systems certified for cyst reduction may be used with disinfected water that may contain filterable cysts.
2. For this System to continue to perform as tested and represented, use only Genuine, Royal Prestige NSF Certified Replacement Cartridges.
3. Replace Battery at time of cartridge replacement (Models: FP 5000 & FP 4500 only) A Replacement Battery (CR 2032) is included with the purchase of replacement cartridge (Type: RC-50-FP).

**CAUTION** (Models: FP 5000 & FP 4500 only) Once Battery has been replaced, do not remove Battery until it's time to replace the Cartridge again. Pre-mature removal of the Battery will cause the Filter Life Indicator to re-set the capacity to zero gallons, which is the starting point for a new Cartridge.



The most important part of maintaining your Drinking Water System is replacing the Cartridge on a regular service interval. To insure that your System continues to perform as tested and represented in the Performance Data Section of your Use and Care Manual, the Cartridge should be replaced as follows:

#### Models: FP5000 & FP4500

When ever the red LED on the Filter Life Indicator begins blinking (Only) every twelve (12) months, whenever you notice a reduction in flow, whenever the rated capacity of the Cartridge has been reached, or whenever there is a taste or odor reoccurrence, whichever occurs first.

#### Models: FP4000 & FP3000

Every twelve (12) months, whenever you notice a reduction in flow, whenever the rated capacity of the Cartridge has been reached, or whenever there is a taste or odor reoccurrence, whichever occurs first.



**IMPORTANT:** Be sure to insist on Genuine, Royal Prestige NSF Listed Replacement Cartridges. All Royal Prestige, Genuine Replacement Cartridges can be identified by the Royal Prestige Registered Trademark which appears on every Genuine Royal Prestige NSF Listed Replacement Cartridge. Only Genuine, Royal Prestige NSF Listed Replacement Cartridges have been tested and certified to insure the performance represented in the Performance Data Section of your Use & Care Manual. Failure to use Genuine, Royal Prestige Replacement Cartridges and replacement components will invalidate your warranty.

#### CARTRIDGE REPLACEMENT (Models: FP5000 & FP4000)

1. Turn off your kitchen faucet and place System in sink upside down on a towel or other soft surface.
2. Locate the two (2) Locking Clips on the inside of the Decorative Cover. Gently depress the Locking Clips and slide the Decorative Cover down and away from the Filter Base.
3. Return the System to an upright position in your sink, loosen the Wing Nut and remove the Clamp from the Filter Base and Filter Housing. Lift the Filter Housing from the Filter Base.

**RECOMMENDATION:** Rubber gloves should be worn to avoid direct contact with the contaminants removed by the used Cartridge.

4. Remove the used Cartridge from the Filter Housing by turning it counterclockwise. Discard used Cartridge with your regular refuse.
5. Wash the inside of the Filter Housing and Filter Base with warm water, mild dishwashing detergent using a clean cloth.

**CAUTION:** Do not use abrasive pads or other abrasive materials to clean the Filter Housing and Filter Base.

6. Remove the sanitary plastic wrap from the new Cartridge. Thread the new Cartridge clockwise onto the Threaded Post inside the Filter Housing until you feel resistance. Make an additional quarter turn. Do Not Over-Tighten.
7. Make certain the O-ring is seated onto the Filter Base. Place Filter Housing onto Filter Base, and place the Clamp around the Filter Housing and Filter Base.
8. Locate black arrow found on Clamp, and align with the arrow on Filter Base.
9. Turn cold water "on" and pull Diverter Pin. Carefully look for leaks around the fitting and clamp areas. In the event of a leak, dis-assemble the connection where the leak is present, re-assemble and tighten.
10. Place the Decorative Cover over the Filter Housing and locate over the Clamp. Gently push Decorative Cover downward until you hear Locking Clips lightly snap into place.
11. Depending upon whether you locate your Drinking Water System to the right or left of your kitchen sink, the Tubing from the Diverter Valve will press fit into slot located on either side of the Decorative Cover.
12. Position Spout so that water will flow into kitchen sink. Turn the cold water faucet "on" and pull Diverter Pin. Water will begin filling the Filter Housing.
13. Remove Battery Shuttle from Electronic Spout Assembly (Model: FP 5000 Only), and discard old battery. Insert new Battery as shown and re-install Battery Shuttle to rear of Electronic Spout Assembly.
14. Allow the System to flush into sink for fifteen (15) minutes. This will remove any fine, black carbon particles left over from the manufacturing process, expel trapped air, and will condition the Cartridge for normal use. This procedure should be repeated each time a new Cartridge is installed.

Congratulations! Your Drinking Water System is now ready for use.

**CAUTION:** (FP5000 & FP4500 Models only) Once Battery has been replaced, do not remove Battery until it's time to replace the Cartridge again. Pre-mature removal of the Battery will cause the Filter Life Indicator to re-set the capacity to zero gallons, which is the starting point for a new Cartridge.



#### REPLACING THE CARTRIDGE (Model: FP4500 Only)

The most important part of maintaining your Drinking Water System is replacing the cartridge on a regular service interval. To insure that your system continues to perform as represented in the Performance Data Section of this manual, the cartridge should be replaced whenever the red LED on the filter life indicator begins blinking (Models: 5000 FP & 4500FP only), every twelve months, when you notice a reduction in flow, when the rated capacity of the cartridge has been reached, or whenever there is a taste or odor reoccurrence- whichever occurs first.

**IMPORTANT:** Be sure to insist on Genuine, Royal Prestige NSF Listed Replacement Cartridges. All Royal Prestige Genuine Replacement Cartridges can be identified by the Royal Prestige Registered Trademark which appears on every Genuine, Royal Prestige NSF Certified Cartridge Only Genuine, Royal Prestige NSF Listed Replacement Cartridges have been tested and certified to insure the performance represented in the Performance Data Section of this manual. Failure to use Genuine, Royal Prestige Replacement Cartridges and replacement components may invalidate your warranty.

#### FP4500 (Under-Counter Model)

1. Turn off the cold water supply to the System. Disconnect the Red and Blue tubing from the Inlet Connector and Outlet Connector located on Lid Assembly.
2. Place a towel or other soft object in sink to prevent damage to System. Remove System from Base, and set in sink. Turn knob located on Clamp, counter clockwise to loosen. Remove Clamp from Lid Assembly and Filter Housing.

**RECOMMENDATION:** Rubber gloves should be worn to avoid direct contact with the contaminants removed by the used cartridge.

3. Lift Lid Assembly from Filter Housing. While securing Lid Assembly, turn the Cartridge counter-clockwise to remove. Discard with regular refuse.
4. Wash the inside of the Lid Assembly and Filter Housing with warm water, mild dishwashing detergent using a clean cloth.

**CAUTION:** Do not use abrasive pads or other abrasive materials to clean the Filter Housing or Filter Base.

5. Remove the plastic sanitary wrap from the new Cartridge. Thread the new Cartridge clockwise onto the Threaded Post inside the Filter Housing until you feel resistance. Make an additional quarter turn. Do not Over-Tighten.
6. Make certain O-Ring is seated onto Lid Assembly. Place Lid Assembly onto Filter Housing, and place Clamp around the Lid Assembly and Filter Housing. Tighten Clamp securely.
7. Return the System under the sink and re-install the Red and Blue Tube ends. Sit unit in Base and position under sink.
8. Turn the cold water supply "on" slowly. Push the Lever upward and allow System to flush into drain for 15 minutes.
9. Remove Battery Shuttle from Filter Life Indicator. Remove old Battery from Battery Shuttle and discard old Battery.
10. Insert new Battery into Battery Shuttle and re-insert Battery Shuttle into Filter Life Indicator.

**NOTE:** The LED Display will cycle through the green, yellow and red lamps three (3) times before shutting off. This re-sets the Filter Life Indicator to zero (0) gallons, which is the starting point for a new Cartridge.

**CAUTION:** Once Battery has been replaced, do not remove Battery until it's time to replace the Cartridge again. Pre-mature removal of the Battery will cause the Filter Life Indicator to re-set the capacity to zero gallons, which is the starting point for a new Cartridge.

**IMPORTANT:** Before using this System, or whenever a new Cartridge is installed, be sure to allow the System to flush for 15 minutes. This procedure will remove fine, black carbon particles left over from the manufacturing process, expel trapped air, and will condition the Cartridge for normal use.

11. Return the Lever to the neutral position.

Congratulations...your new, Frescapure tm Deluxe Under Counter System is now ready for use!

**NOTICE:** For your convenience, a new Battery (CR 2032) is included with the purchase of every new Genuine, Royal Prestige NSF Certified Replacement Cartridge (RC-50-FP). Replace Battery only at time of Cartridge replacement.